



SAMSUNG QUICK REFERENCE GUIDE For Changing System Time

GETTING STARTED Changing System Time

With Handset on Hook

- Press "TRSF" key
- Dial 200
- Enter password (default is 1234)
- Dial 1
- Press "Speaker" Key
 - Dial 505, and display shows

<i>OLD: 1 0 3 3 1 0 3:</i>
<i>xxxx</i>
<i>NEW: -</i>
<i>WMMDDYY:HHMM</i>

Where

W = day of the week (i.e. Sun = 0, Mon = 1, Tues = 2)

MM = month (i.e. March=03, April=04)

DD = day of the month

YY = last two digits of the year (i.e. year 2003 = 03, year 2004 = 04... ..

- *You will need to re-enter the date to get to changing the time. So if the date on your*

system is correct already, just type in the digits as per the top line of your display

until you reach HHMM.

- *If you make a mistake at any time, press the "HOLD" key to erase and start again*
- *Enter the new time using 24 hour clock*
- *Press "TRSF" to store and exit programming*

Note: Once you are in programming, any delay of more than 20 seconds between key

strokes will cause the system to automatically close programming. If this happens, you

have to start from the beginning.